


Dear customer thank you for purchasing a New Horizon product which will give you an endless listening pleasure!

Package contents: Owner Manual (this one), power connection cable, 30VAC power supply.

**Please read this page carefully before operating your unit.**  
**Carefully remove all parts from the transport packaging. Please keep the packaging for future transport.**

Be sure that ALE is switched off rotating the control knob to the OFF position (fully anticlockwise).  
 Check the supplied power cable: connect the plug with the smaller internal hole to the record player and the other side to the "OUT" socket on the rear of ALE. Only the right plug fits so you can't go wrong.  
 Check the label above the power supply before connecting it to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the "IN" socket on the rear of ALE before connecting the power supply to the mains. The lights in the front panel will flash three times to indicate the unit is working.

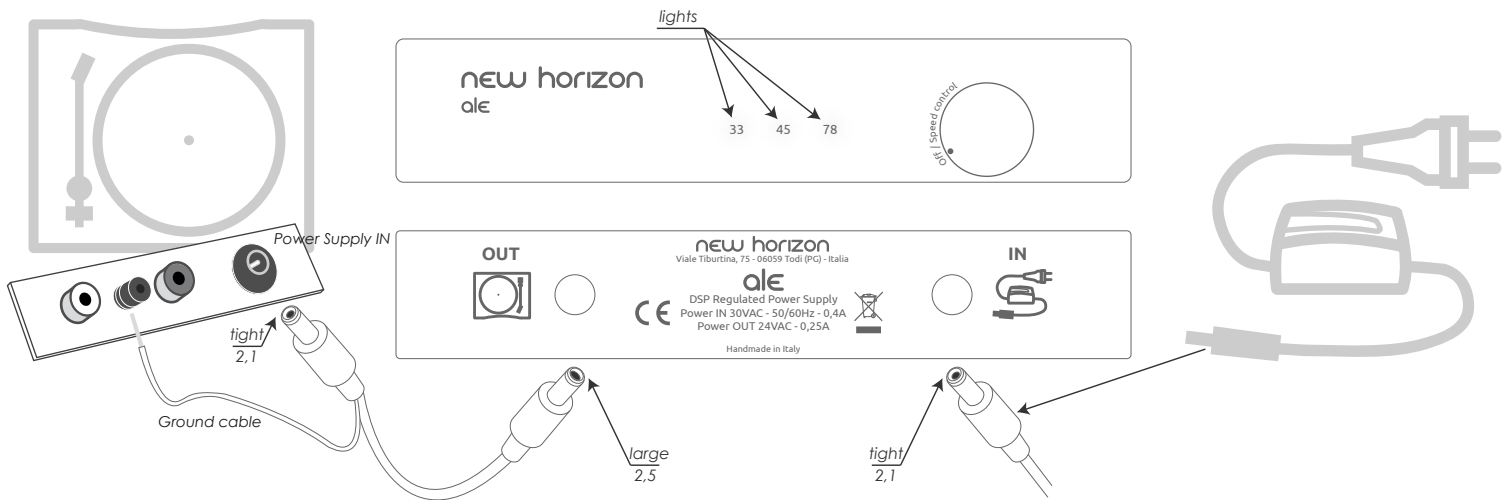

### The power switch of the turntable must be always in "ON" position

because the switch remains functional.


From now use only ALE to switch on / switch off the turntable.

Now you can switch on the turntable and change the rotating speed by the control knob of ALE.

Steps from the "OFF" position (clockwise rotation) : 33,33 rpm / stop / 45 rpm / stop / 78 rpm

The turntable changes its rotating speed from "off" to the selected speed and from the rotation to "off" gradually in 3 to 8 seconds.

The active speed is indicated by a light in the front panel.

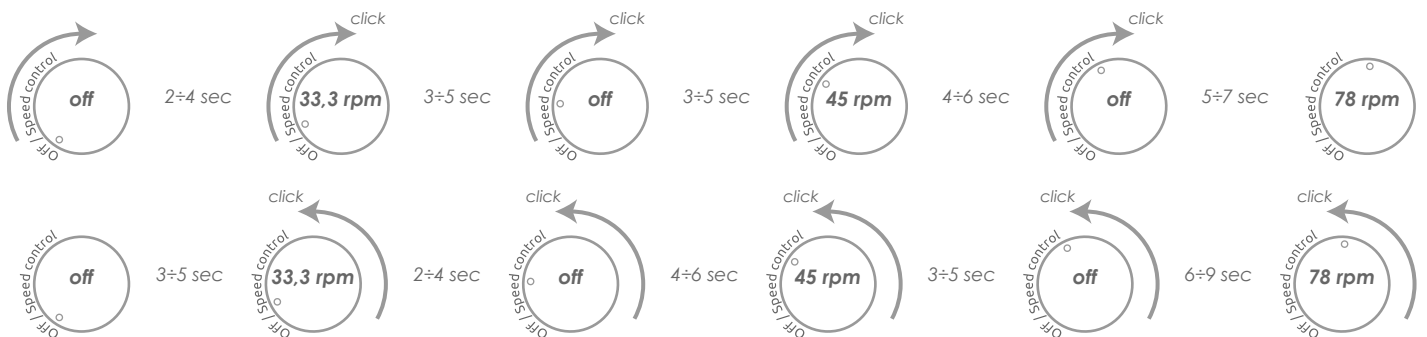

Please note: in order to use the 78 rpm speed, you have to fit the drive belt around the platter and the bigger diameter part of the motor pulley.

Enjoy your listening!

